

Ölpumpe COB-20/29/40 - Einstellung Pumpendruck **Oil pump COB-20/29/40 - Setting pump pressure**

Werkseinstellung Pumpendruck COB-20/29 /
factory setting pump pressure COB-20/29

ST 1 (Stufe 1/Stage 1) = $8,5 \pm 1,0$ bar

ST 2 (Stufe 2/Stage 2) = $16,8 \pm 2,5$ bar



Einstellung Pumpendruck COB-40 /
Setting pump pressure COB-40

	COB-40		COB-29	COB-20	COB-15
	 SW 8	 SW 8			
ST1	 $\frac{1}{2}$ x	 $\frac{1}{4}$ x			
ST2	 $1\frac{1}{2}$ x	 $\frac{1}{4}$ x			
Pumpendruck / Pump pressure					
	ST1	$11,0 \pm 1,0$ bar	$9,8 \pm 1,0$ bar	$8,5 \pm 1,0$ bar	
	ST2	$23,5 \pm 2,5$ bar	$18,0 \pm 2,5$ bar	$16,8 \pm 2,5$ bar	

Ölpumpe COB-2-20/29/40 - Einstellung Pumpendruck Oil pump COB-2-20/29/40 - Setting pump pressure

Werkseinstellung Pumpendruck COB-2-20
factory setting pump pressure COB-2-20

ST 1 (Stufe 1/Stage 1) = 8,5 bar

ST 2 (Stufe 2/Stage 2) = 17 bar



Einstellung Pumpendruck COB-2-29/40 /
Setting pump pressure COB-2-29/40

	COB-2-40	COB-2-29	COB-2-20	COB-2-15
ST1 ST2	SW 8 ST1 1 x ST2 2 x ↓	SW 8 ST1 1/4 x ST2 1 3/4 x ↓	↓	
Pumpendruck / Pump pressure	ST1 14 bar ST2 25 bar	ST1 10 bar ST2 24 bar	ST1 8,5 bar ST2 17 bar	