


WOLF-Standard

✓ Steckerfertig

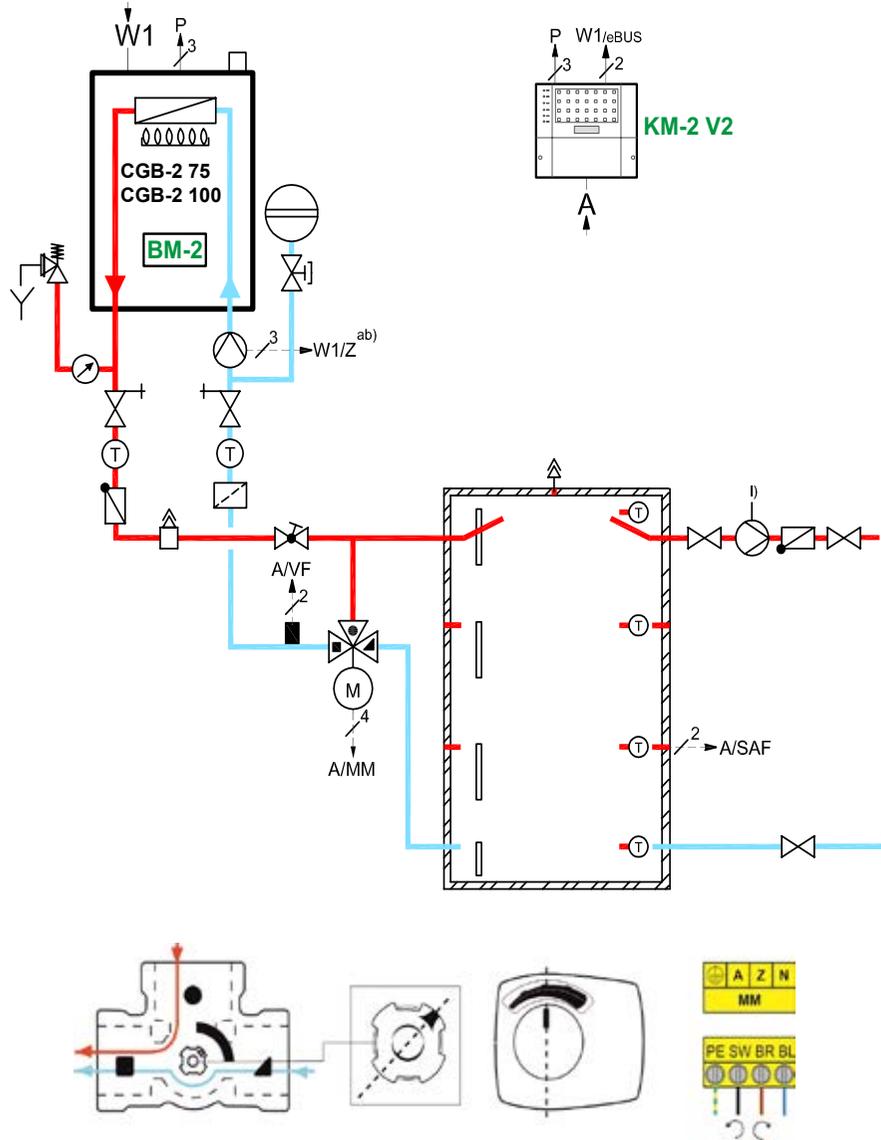


Relaistest:

KM50 = Ansteuerung Relais Mischermotor Auf (Klemme „A“)
 KM50 = Ansteuerung Relais Mischermotor Zu (Klemme „Z“)

Alternative

► Klemme „A“ und „Z“ tauschen.

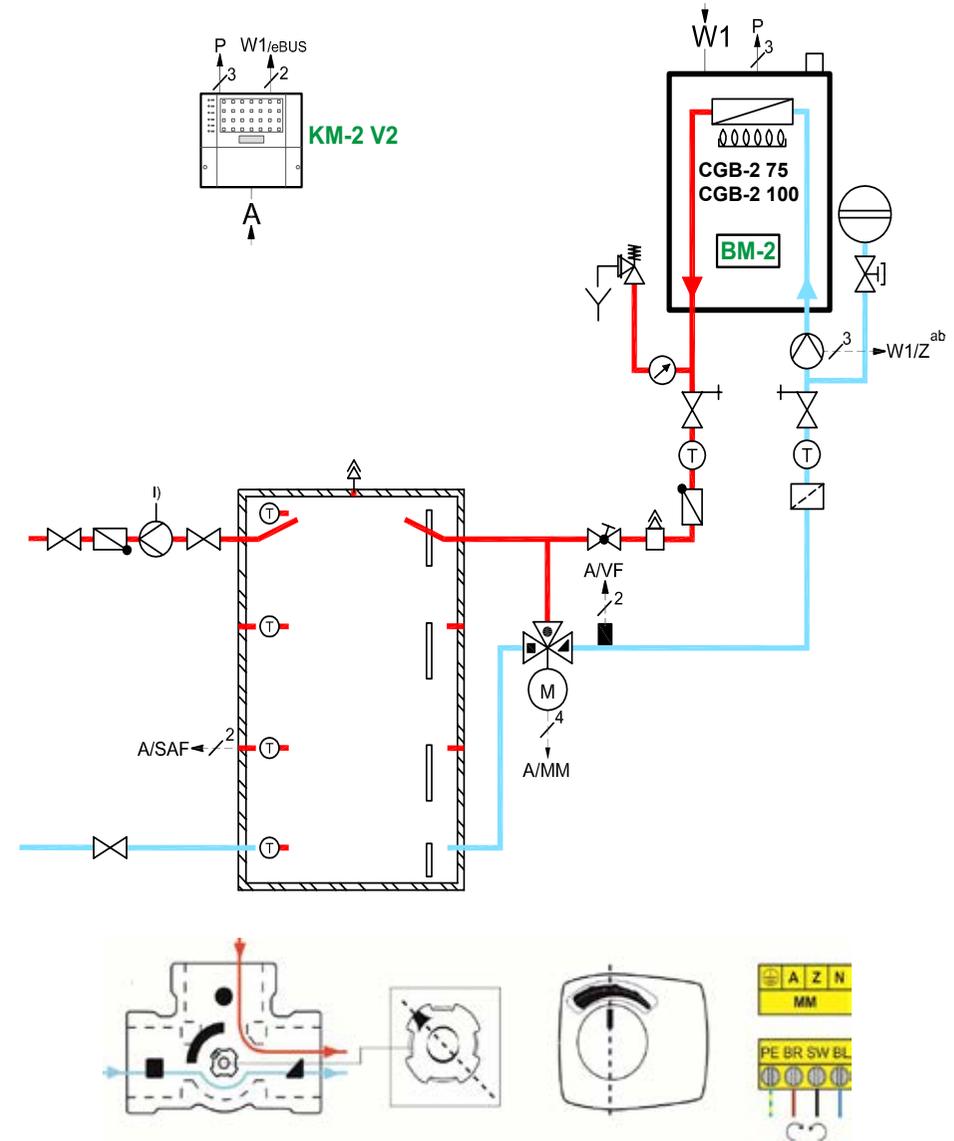


Relaistest:

KM50 = Ansteuerung Relais Mischermotor Auf (Klemme „A“)
 KM50 = Ansteuerung Relais Mischermotor Zu (Klemme „Z“)

WOLF-Standard

✓ Steckerfertig

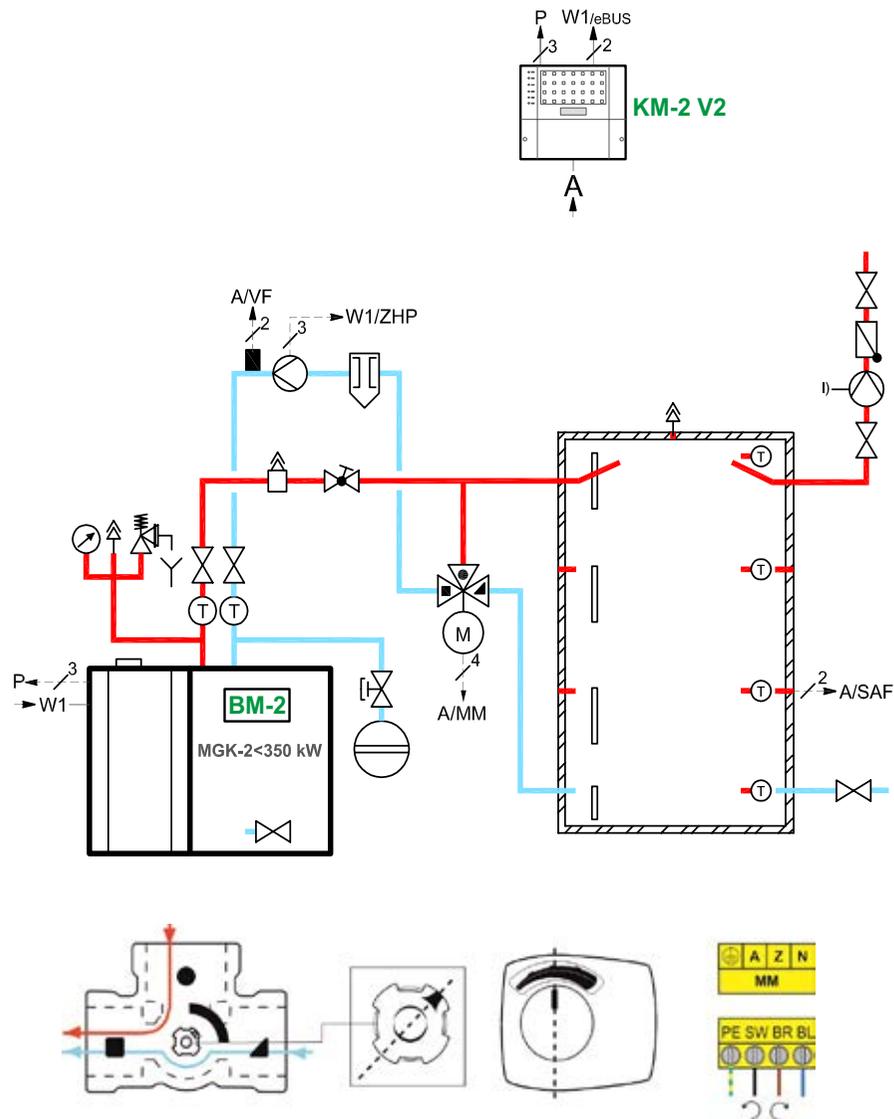


Relaistest:

KM50 = Ansteuerung Relais Mischemotor Auf (Klemme „A“)

KM50 = Ansteuerung Relais Mischemotor Zu (Klemme „Z“)

Alternative

► Klemme „A“ und „Z“ tauschen.

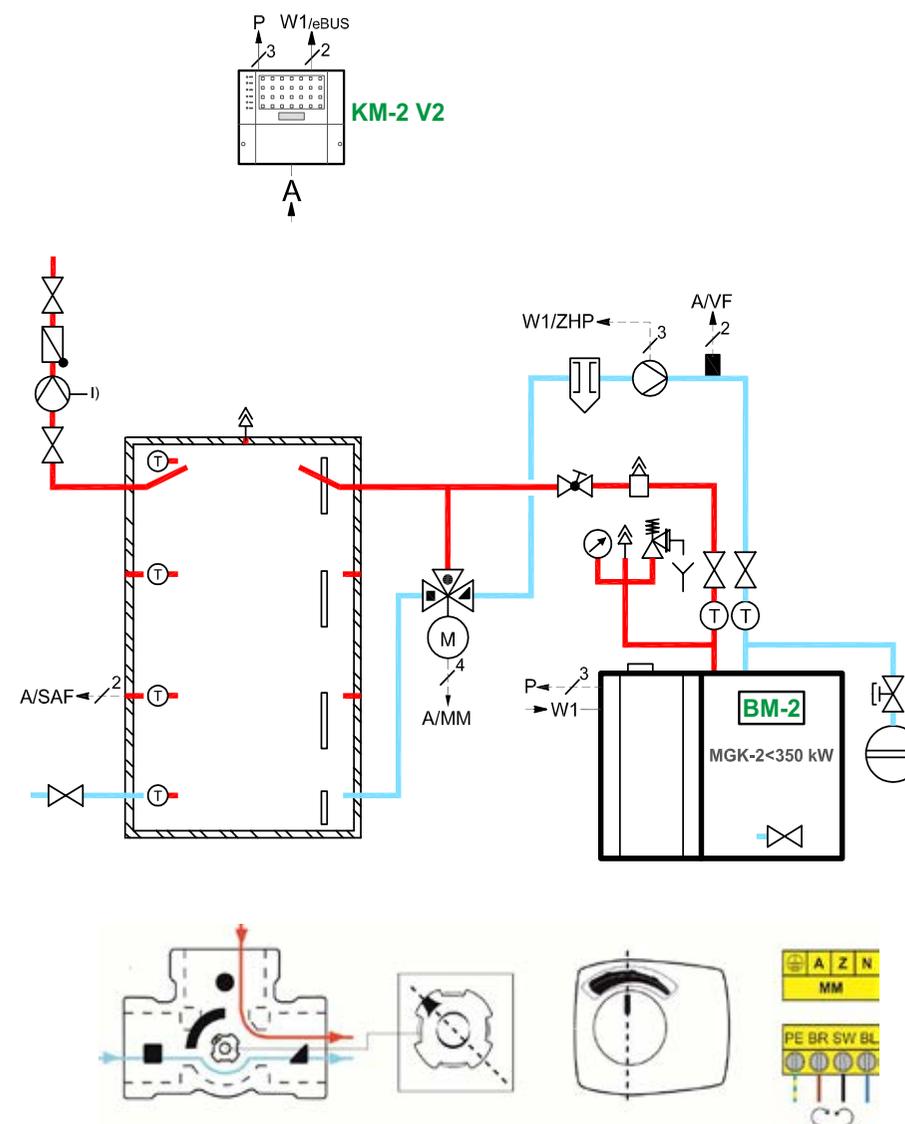


Relaistest:

KM50 = Ansteuerung Relais Mischemotor Auf (Klemme „A“)

KM50 = Ansteuerung Relais Mischemotor Zu (Klemme „Z“)

WOLF standard

✓ Fully wired

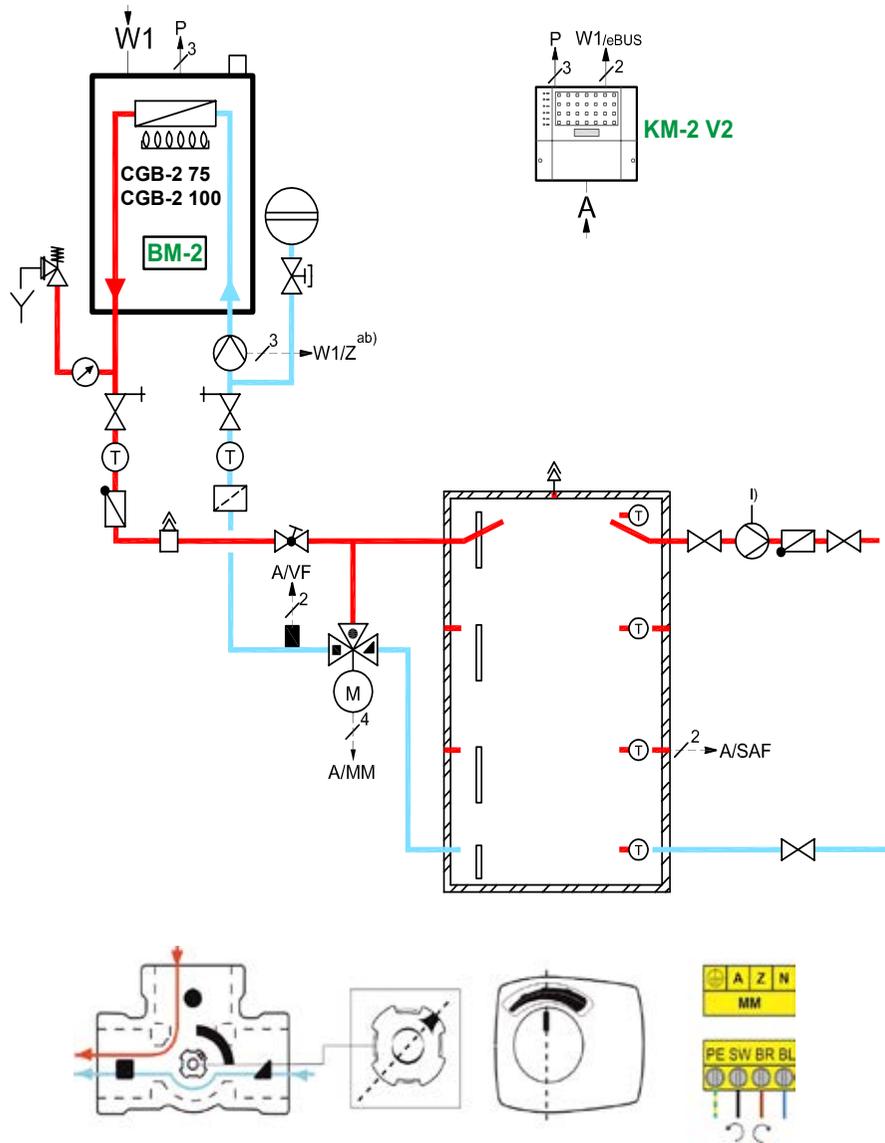


Relay test:

KM50 = Control relay mixer motor open (terminal "A")
 KM50 = Control relay mixer motor closed (terminal "Z")

Alternative

► Swap terminals "A" and "Z".


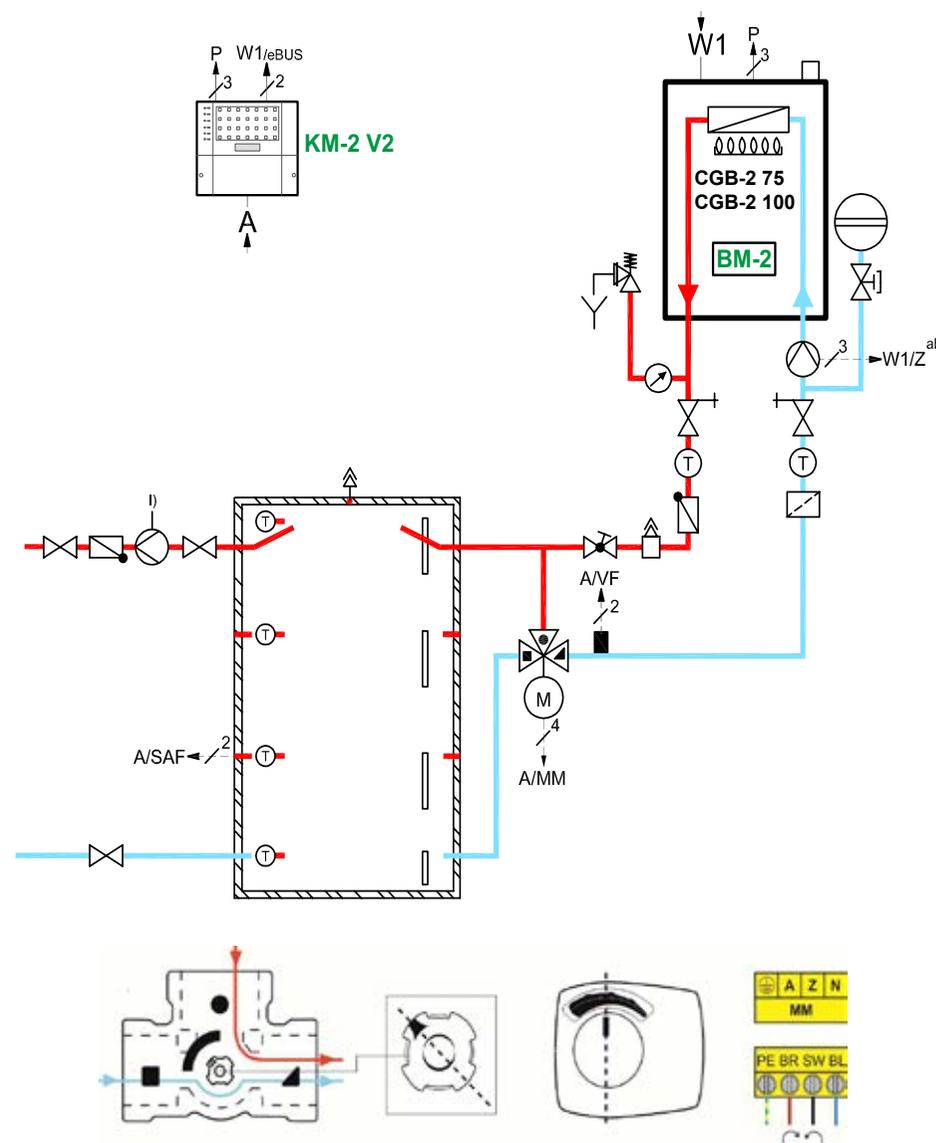


Relay test:

KM50 = Control relay mixer motor open (terminal "A")
 KM50 = Control relay mixer motor closed (terminal "Z")

WOLF standard

✓ Fully wired

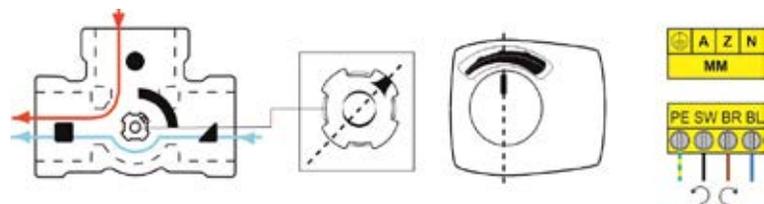
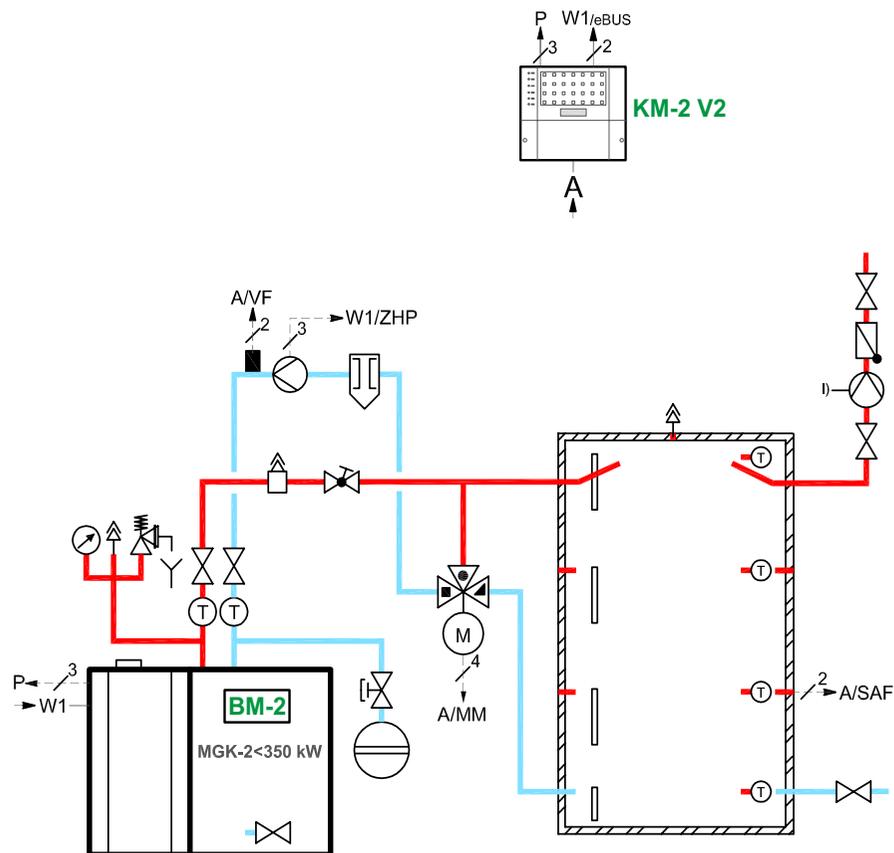


Relay test:

KM50 = Control relay mixer motor open (terminal "A")
 KM50 = Control relay mixer motor closed (terminal "Z")

Alternative

► Swap terminals "A" and "Z".

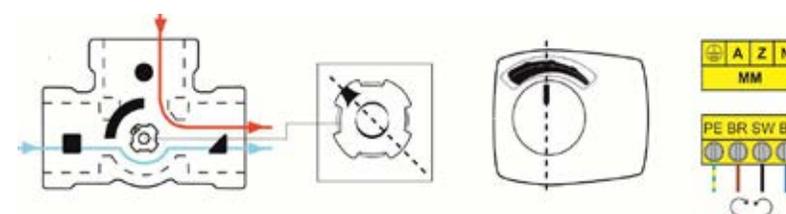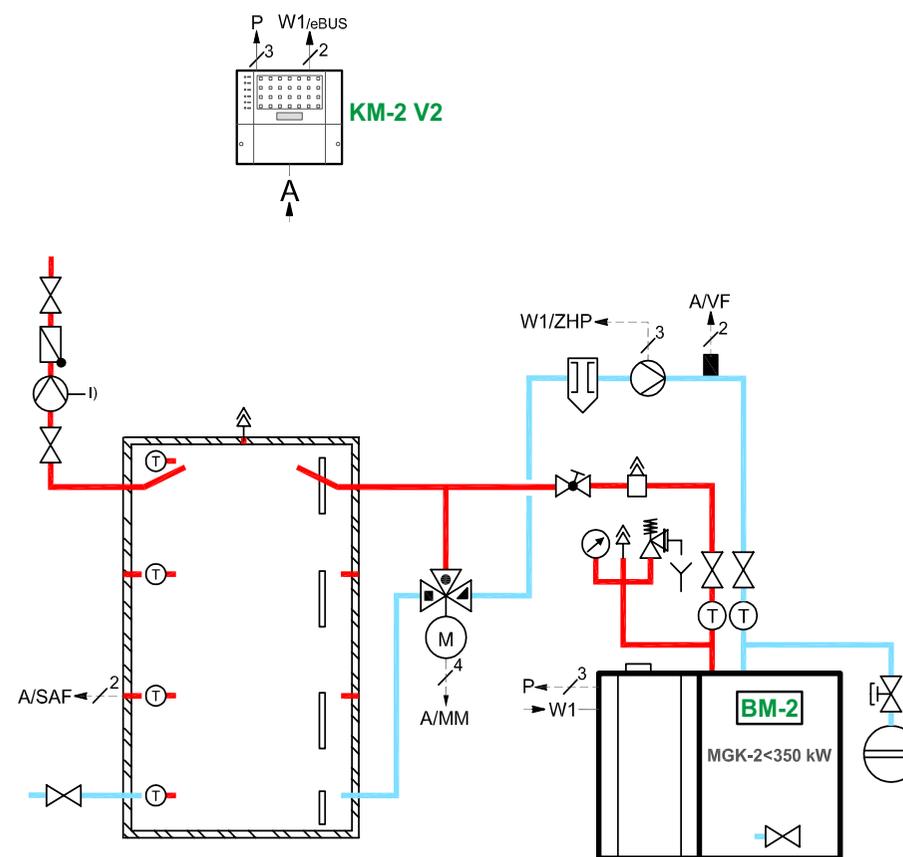

Relay test:

KM50 = Control relay mixer motor open (terminal "A")
 KM50 = Control relay mixer motor closed (terminal "Z")