

Badheizkörper

MIDO Q

2018.04

Montageanleitung

Assembly instructions

Instructions de montage

Istruzioni di montaggio

Instrucciones de montaje

Instrucțiuni pentru montare

BEMM

Service:

BEMM GmbH







Postfach 10 01 44

D-31101 Hildesheim


Fon +49(0) 51 21 / 93 00 - 0

Fax +49(0) 51 21 / 93 00 84


eMail info@bemm.de

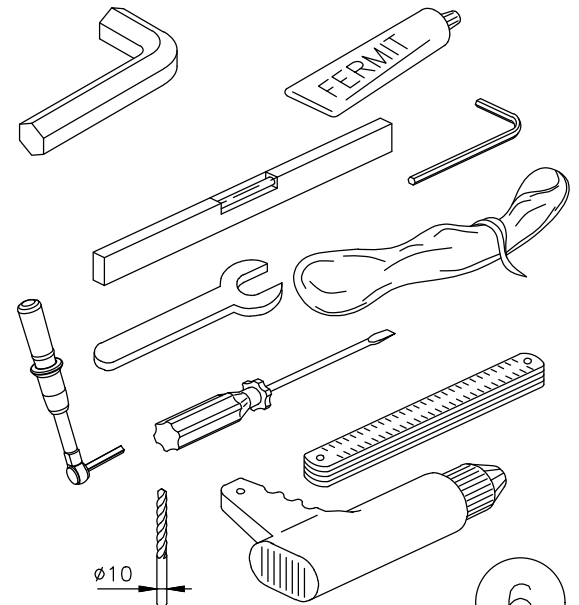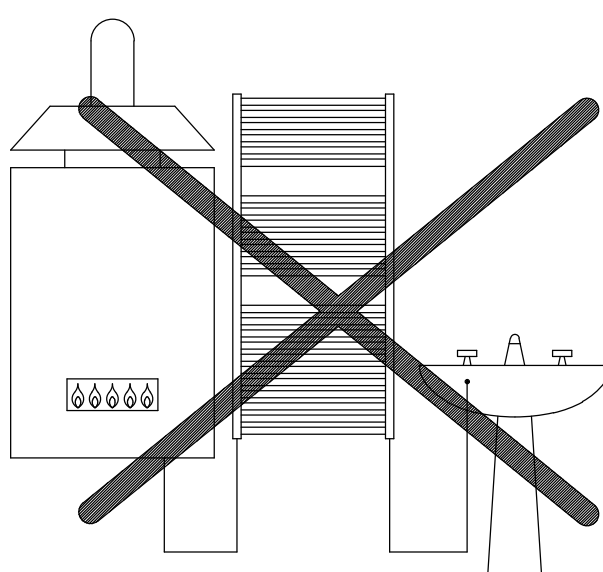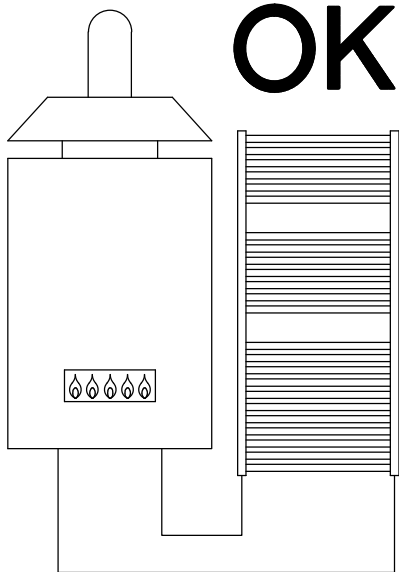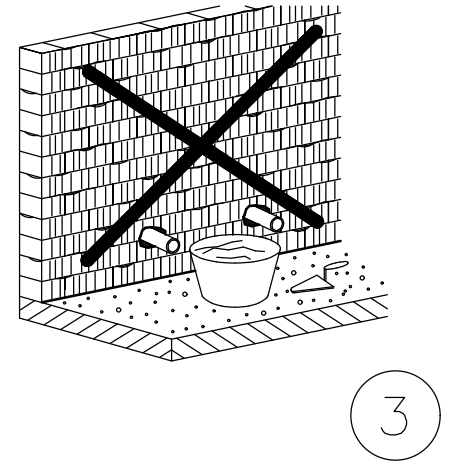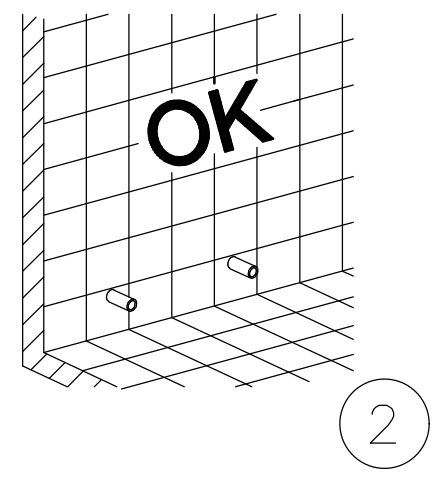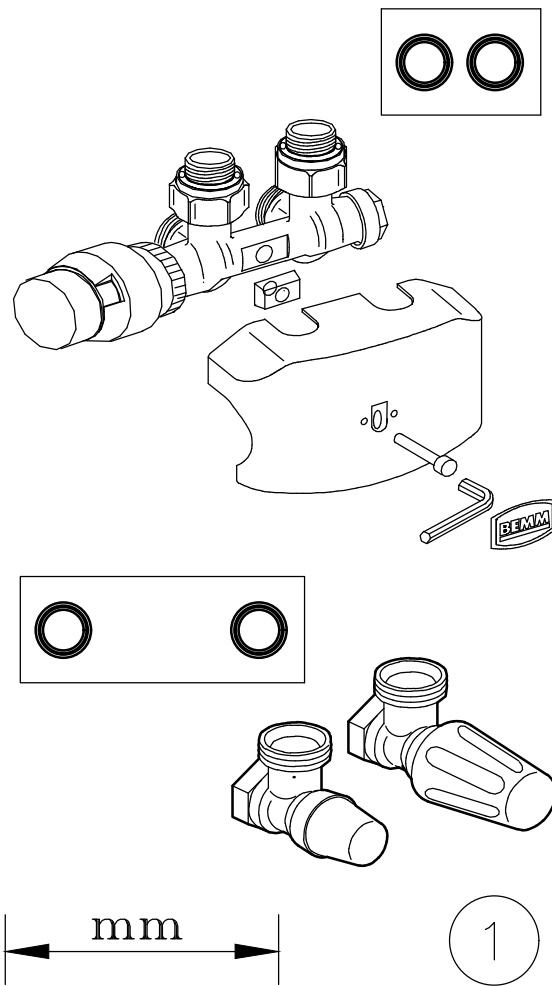

A

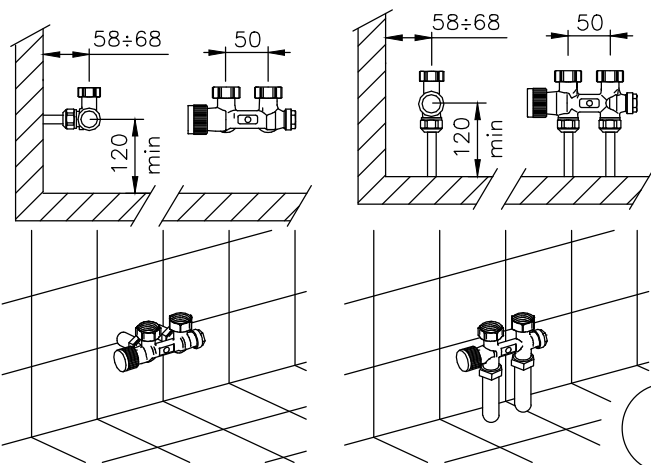

B

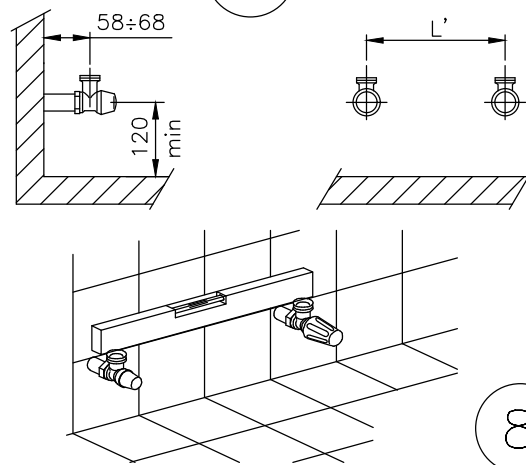

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x




4x

4x

4x

Befestigungen zur Verwendung auf Vollziegel/Hochlochziegel.
Fissaggi da utilizzare solo su pareti in muratura piena/forata.
Brackets to be used only on walls made of solid bricks/perforated bricks.
Fixations à utiliser uniquement sur les murs en maçonnerie pleine/perforée.
Fijaciones a utilizar únicamente en paredes de Ladrillo macizo/perforado.
Fixaje pentru utilizare doar pe pereți în zidărie plină/perforată.

4x

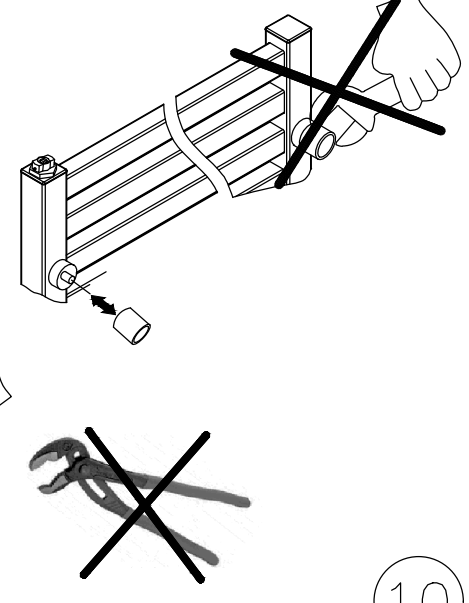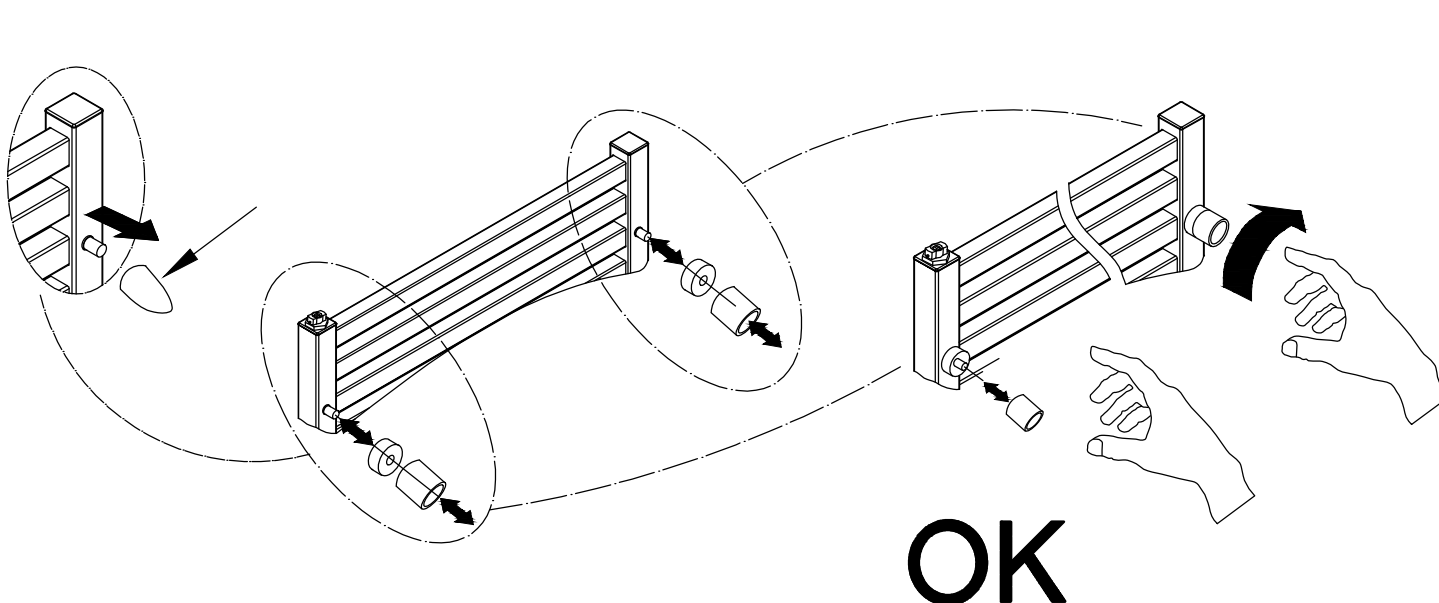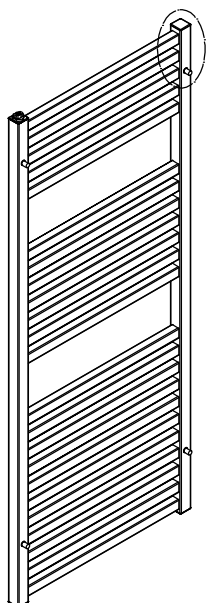

10

H	X	L	L'
872	559	430	400
		530	500
		580	550
		730	700
1216	903	430	400
		530	500
		580	550
		730	700
1517	1204	430	400
		530	500
		580	550
		730	700
1818	1505	430	400
		530	500
		580	550
		730	700

11

12

13

14

15

16

17

18

19

20

21

22

23