

Get it done:


Application instructions Epoxy CF 100



Digital brochure

You can download this brochure, and others, in digital form via this QR code.



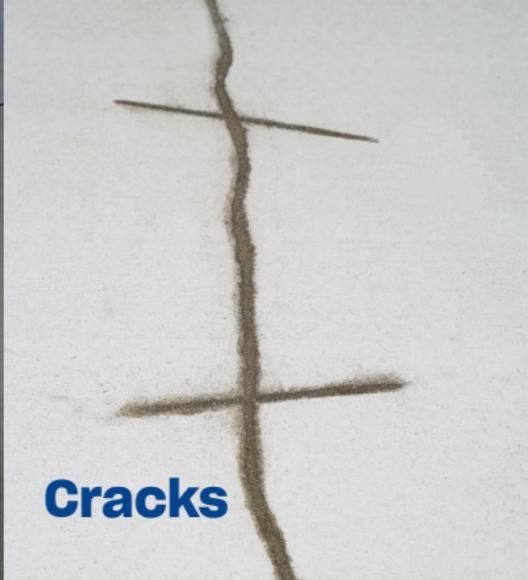

Epoxy CF 100

Product benefits

- ✓ Easy to mix in the bag without tools
- ✓ Injection aid for clean filling of cracks
- ✓ Work can continue after just 60 minutes
- ✓ Hardens even at 3°C
- ✓ Substrate-tolerant up to 6% residual moisture (CM method)
- ✓ High adhesive strength
- ✓ Packaging and leftover material can be easily disposed of

What's included

- ✓ 0.5 kg epoxy resin in mixing bag
- ✓ 1.0 kg quartz sand for scattering
- ✓ 10 corrugated clips
- ✓ 1 injection aid
- ✓ 1 pair disposable gloves

How to use

Filling a crack with Epoxy CF 100



① PREPARE CRACK

Widen the crack to approx. 5 mm deep and min. 5 mm wide.



② PREPARE CROSS-CUTS

If necessary, cut approx. every 20 cm across the crack, approx. 20 - 30 mm deep (not for heated screeds).



③ REMOVE DUST

Use a high-powered vacuum cleaner to remove dust from the crack.



④ FIX THE CORRUGATED CLIPS

Insert the corrugated clips into the notches at right angles to the crack.



⑤ OPEN THE OUTER PACKAGING

Tear the outer packaging at the notches.



⑥ ACTIVATE EPOXY CF 100

The separator bar must be removed to activate the Epoxy CF 100.



⑦ MIX EPOXY CF 100

Mix the contents by alternating pressure on both sides for approx. 30 seconds. Mix the contents all the way into the corners until there are no streaks.



⑧ FIT THE INJECTION AID

Fit the supplied injection aid in the designated position on the bag, using the gloves provided.



⑨ FILL THE CRACK

Use the injection aid to inject the epoxy resin into the crack, and top up again within 10 minutes if necessary.



⑩ SCATTER QUARTZ SAND

After max. 30 minutes, generously scatter quartz sand over the treated areas.



⑪ REMOVE EXCESS

Use a scraper/trowel to smooth off excess epoxy resin and quartz sand.

**Find out what we
can get done for you:**



Subject to changes. The current version of the applicable Technical Data Sheet is relevant for legal matters.

Colour variations are possible.

Global contact:

www.remmers.com/remmers-worldwide

Remmers GmbH

Bernhard-Remmers-Straße 13

49624 Lönigen

+49 (0) 54 32/83-0